

R5 Adjustment

Minimum Signal Level Adjustment

Adjust R5 for minimum signal level of both the Left and Right channel outputs.

