

Wall Wart To Bipolar Power Supply June 2010 Version (Added load resistors)

The load resistors were added as a convenience for testing without a load and are not necessary. The negative regulator needs a slight load to begin regulating which is normally provided by the circuit being powered. These resistors provide a small load so the output voltage can be observed prior to connecting the supply to your circuit.

!!! CAUTION Use 12V AC OUTPUT WALL WART ONLY !!!

