


MFOS MULTI-FUNCTION MODULE WIRING REAR-VIEW OF PANEL.

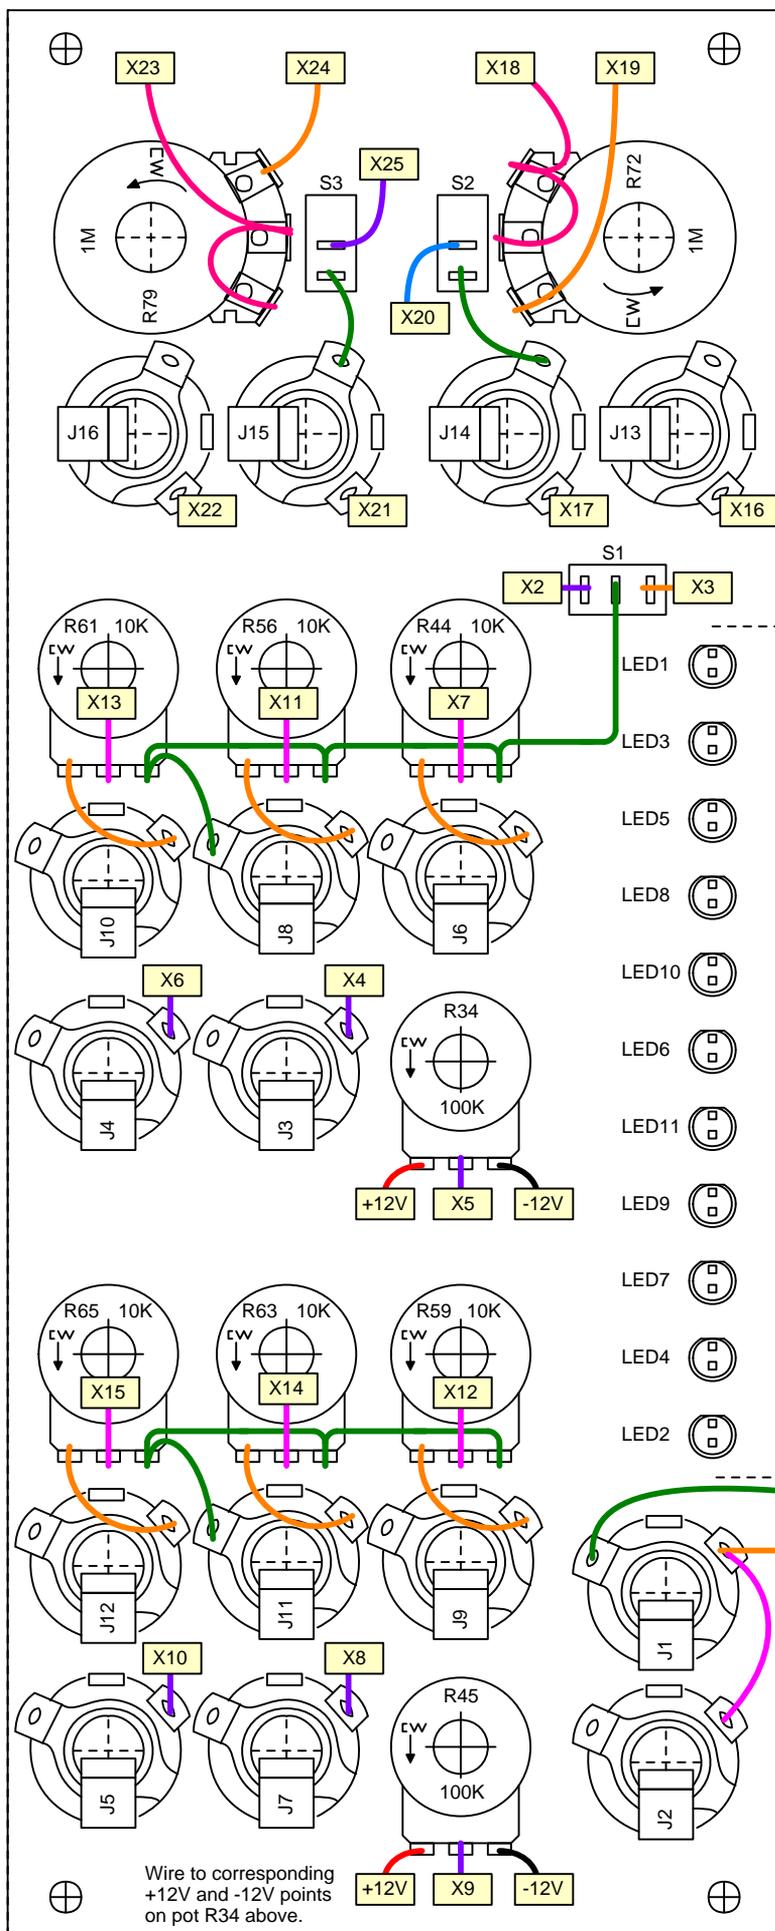

LEDs are mounted on the PC board and protrude through the panel face.

If mounting your own LEDs wire each anode from the corresponding donut on the PC board. Wire all cathodes EXCEPT LED6 together and connect them to any of the LED cathode donuts EXCEPT LED6. Wire LED6's cathode to ground.

Wire to corresponding +12V and -12V points on pot R34 above.

!!! NOTE !!!
Wiring shown assumes conductive panel material. If using a non-conductive material YOU MUST WIRE ALL JACK SLEEVE TERMINALS TOGETHER AND TO GROUND.