


MFOS Wave Freaker Module

Rear Wiring View

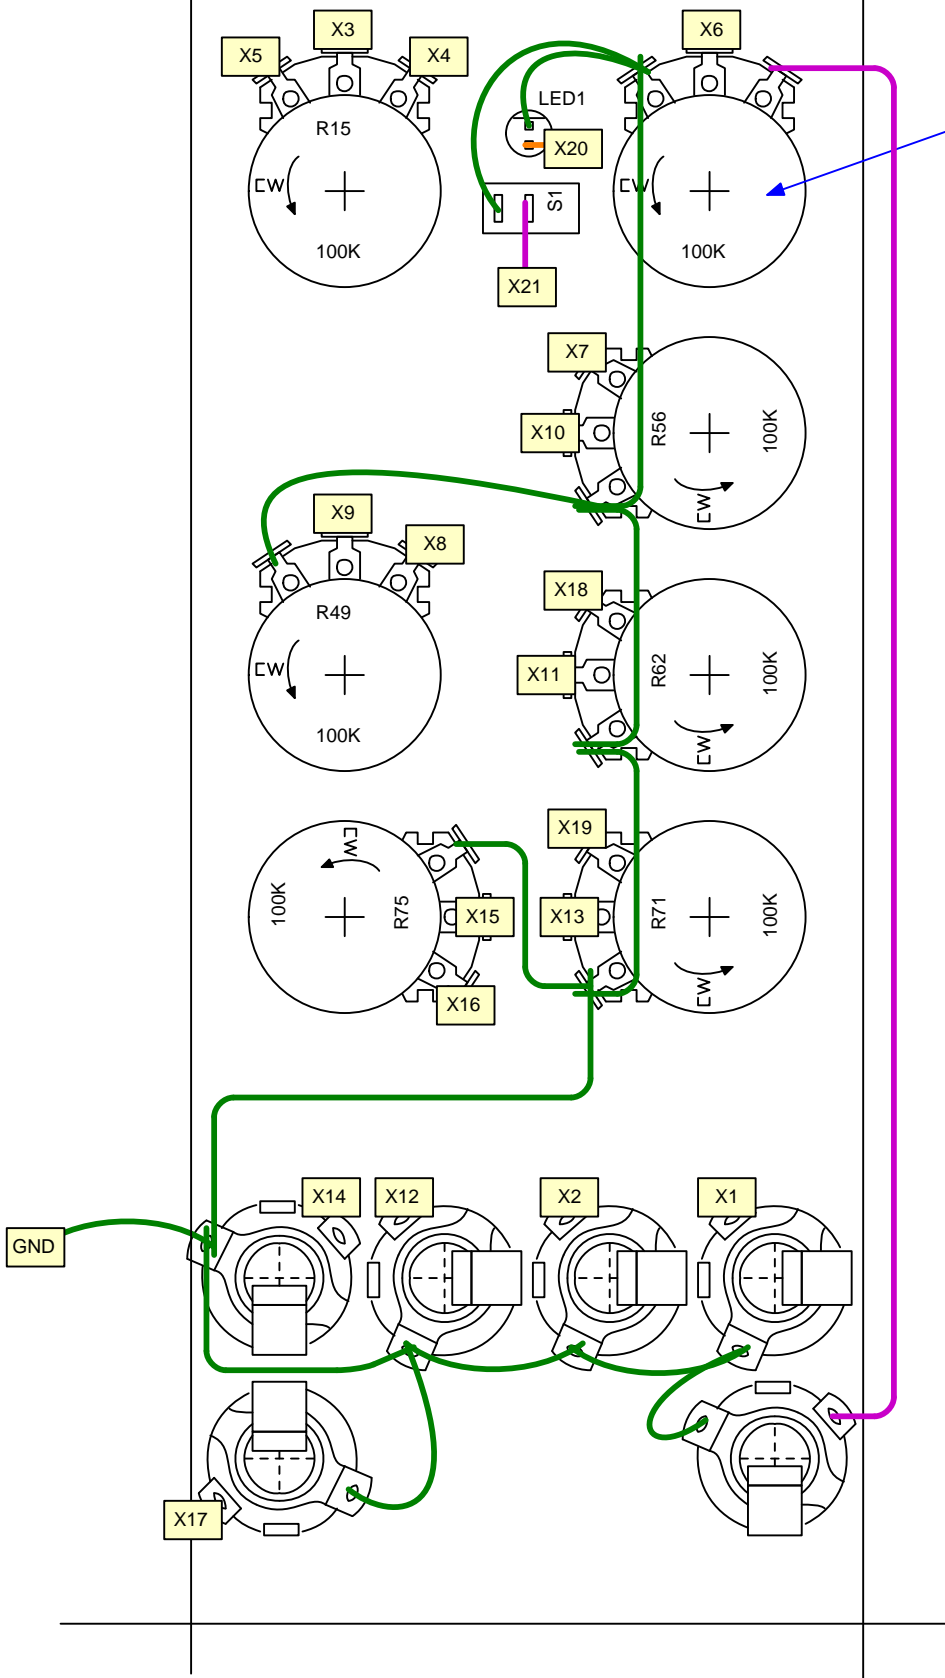


This input level pot is not shown on the schematic. Neither are the 1/4" jacks. Only the connection points from the schematic are shown.

Coax is recommended for connection between pot and jack and between pot and PC board.

Coax is recommended for connection between X3 and the PC board.

Mount a 20K resistor in parallel with a 47pF cap across each CV input jack's tip and ring terminal (X14, X12, X2, X1).

If using banana jacks connect one side to the jack's tip and the other sides to ground.

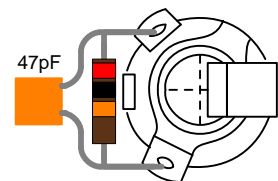

These parts although not having designators are included in the quantities for the parts list.