

8.5" (approx. 216 mm)


TOP

2 pieces 8.5" x 7.25" needed. No thicker than 1/8". Drill panel holes in one and leave the other blank.

Drill 5/32" mounting holes 3/10" from sides on TOP ONLY.

Panel material:  
\* Masonite  
\* Aluminum  
\* Plastic  
\* Cardboard  
I recommend using aluminum tape to line non-conductive front panels. Or at least ground all pot bodies.

7.25" (approx 184 mm)

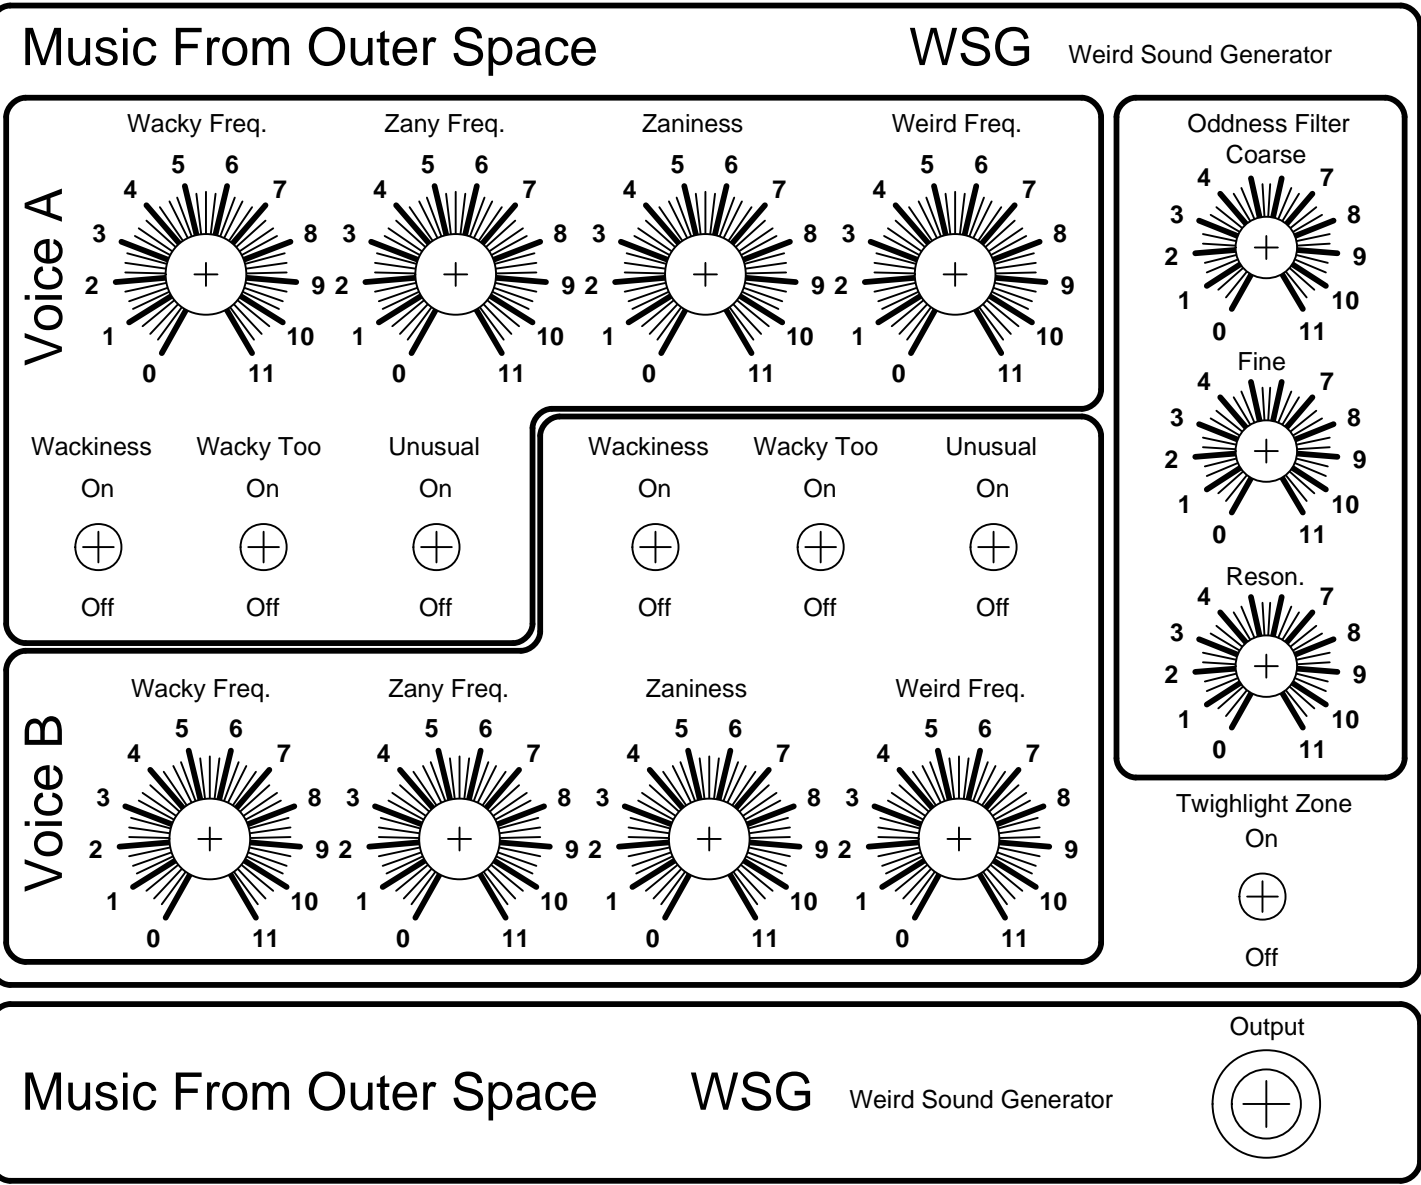

Use the panel layout to mark the drill holes (TOP PANEL ONLY). Adhere the panel layout after the case is completed.