


# Simple Yet Effective Synth-DIY Synth-Cabinet Ideas VII

## REAR VIEW - NOT TO SCALE

### Powering the Cabinet and Modules

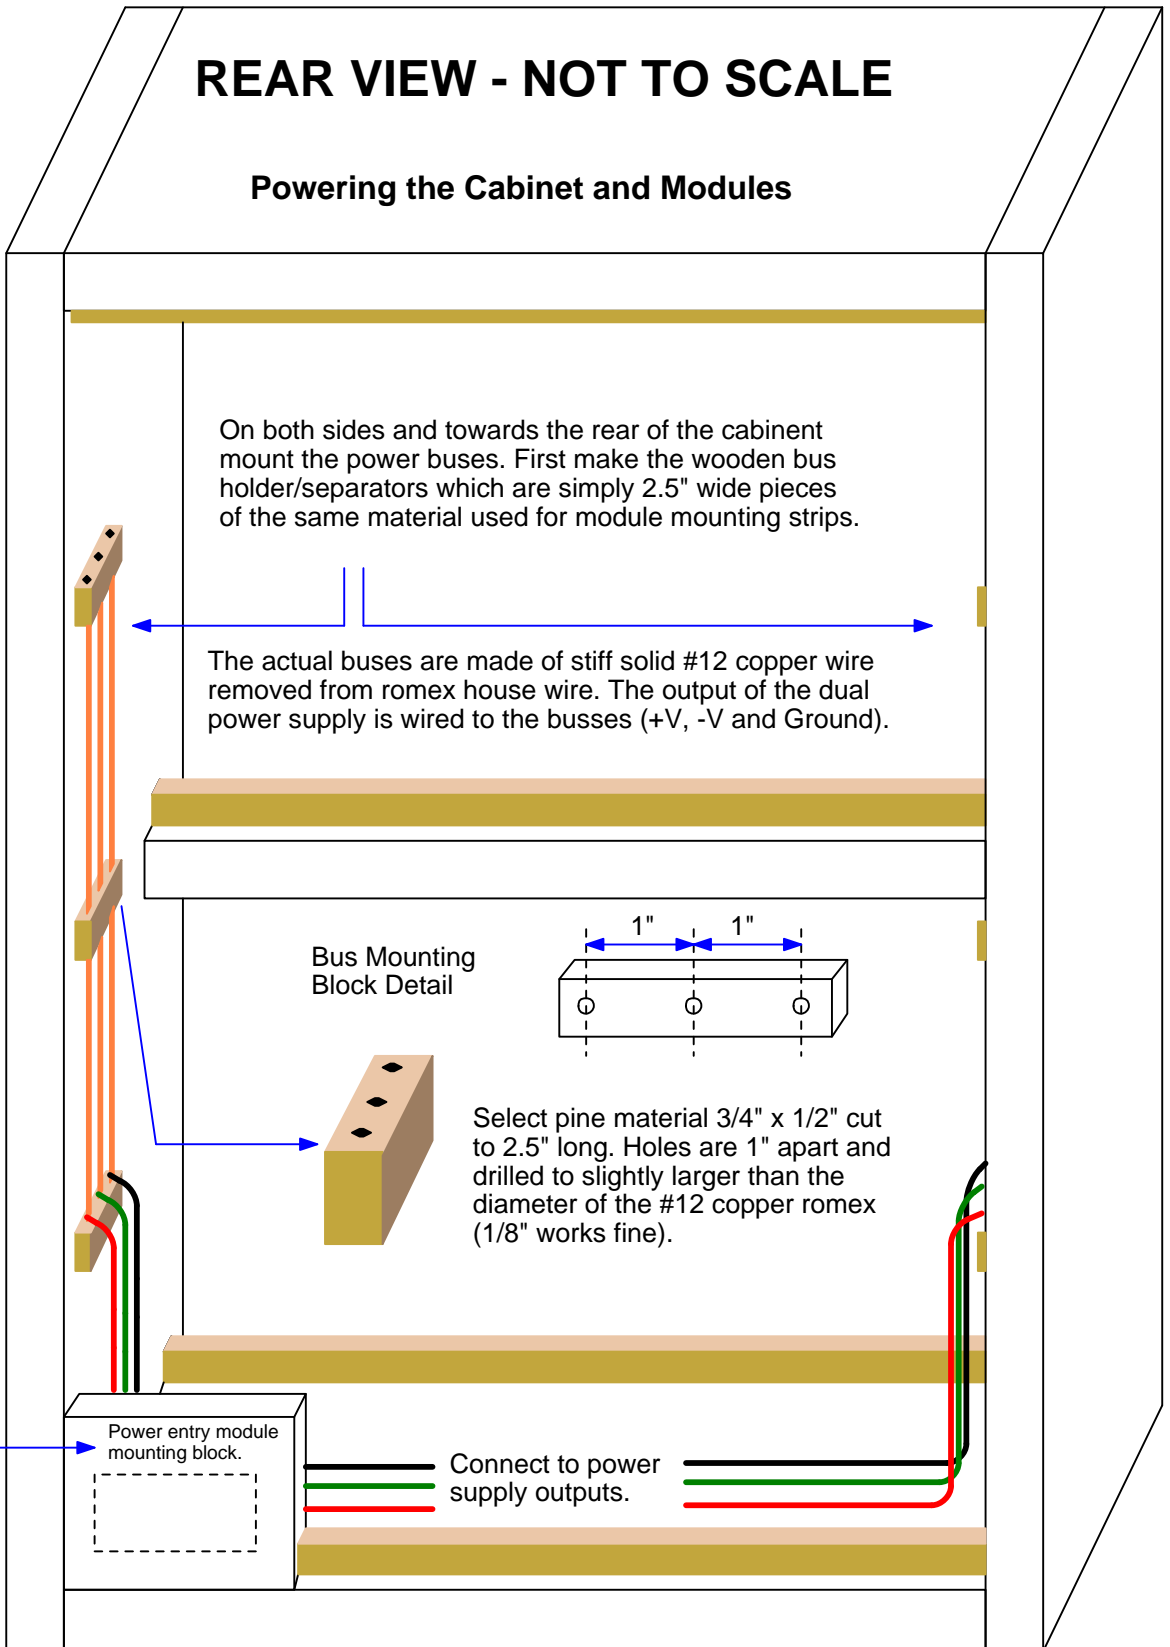

Mount the supply's transformer and PC board as far to the rear of the cabinet as possible. Connect the buses to the supply's output using #20 gauge stranded wire. Clearly mark the busses +V, -V and GND. As you install a module solder its #22 stranded copper supply connection wires to the power buses.

## REAR VIEW - NOT TO SCALE